



**NURIT ALL MODEL QUICK REFERENCE GUIDE**  
**APPLICATIONS POS6\_STD, POS7\_STD & POS7PLUS**  
**VERSION POS 4.9X – RETAIL AND RESTAURANT**

Press **[MENU]** to access or exit the Main Menu or to go back one menu level.

Press the **[RETURN]** or **[▲]** and **[FORCED]** or **[▼]** key to scroll up and down through the menu options.

**\*Note:** Function supported by POS7PLUS only.

**1. REPORTS**

1.	DEFAULT REPORT	Prints programmed default report.
2.	CURRENT REPORT	Prints a report of the current transactions: Offers several options: Used to change default report setup.
3.	HISTORY REPORT	Prints previous batch totals: Prints Combined or Per Batch totals: Maximum of 300 batches.
4.	DISPLAY TRANS.	Displays current transactions offering different sorting options.
5.	RECEIPT COPY	Prints a copy of the last approved Customer or Merchant receipt. (Transaction must be last function performed.) Prints any Customer receipt.
6.	PERFORMANCE	Prints percentage of Approvals, Denials, Disconnects, Manual Entries and Swipes: Reset option.
7.	TIP REPORT	Prints tip details for all servers or a specific server.
8.	REPORT SETUP	Offers option to print Visa/MC transactions together or separately. Adds Merchant Parameters to Tip Report.
9.	RAMDISK REPORT *	Report displays Maximum number of transactions for different EDC Types. *
10.	ComLog Report *	Prints a communication report of the last transaction/batch. *

**2. MERCHANT PARAMS**

1.	AUTHORIZATION	Enables/disables different card and transaction types: Debit mode.
2.	SECURITY LEVEL	Sets security levels for different operations.
3.	EDIT HEADER	Edits the five line, 24 character header.
4.	EDIT TRAILER	Edits the five line, 24 character trailer.
5.	SET CASH EDC	Enables/disables recording of cash transactions.
6.	MERCHANT FEE	Enables and sets the surcharge rate for debit transactions.
7.	SET BATCH TIME	For Host Capture/Autobatch terminals, sets time terminal will print batch report.
8.	INDUSTRY PROMPT	Enables/disables Server/Clerk, Invoice, Table and Guest No. Modes. (Table and Guest modes for restaurant only).
9.	SITE ID	View or change Site ID.

### 3. MERCHANT OPTIONS

1.	PAPER TYPE	Offers choice between single ply, double ply or custom (two receipts for all EDC).
2.	NO PAPER MODE	Enables/disables print function (integrated or stand alone).
3.	BUZZER SET	Enables/disables tone when pressing keypad.
4.	OPERATION MODE	Toggles between Normal and Demo Modes.
5.	BATTERY SAVER	Offers option of turning Radio Only, Terminal Only, Radio and Terminal or neither off after a period of inactivity. (Wireless Terminals)
6.	PRINT DISCLAIMER	Enables/disables print of the disclaimer on each receipt.
7.	SET MENU TYPE	Toggles between manual scroll and auto scroll.
8.	SET HALO	Maximum dollar limit for a Sale, Return or Debit Cash Back.
9.	PRINT SETUP	Prints terminal setup report listing; Current application, Header, Trailer, Card and transaction types, Paper type, Surcharge, Security settings, PIN Pad info, HALOs, Modes, Tip settings, Fraud Control settings and Hot Keys.
10.	STORE & FORWARD	Enables/disables offline settings: Upload transactions: Resend/delete failed transactions.
11.	CHECK READER	Enables/disables check reader and check imager for upload to the Web. ( <b>Note:</b> Check Reader supported by all applications: Check Imager supported by POS7PLUS only.)
12.	SIGNATURE OPTION *	Initializes an E-Pad allowing the capture of signatures for upload to the Web. * ( <b>Note:</b> Not supported by NURIT 8000.)
13.	BRIDGE COMM. *	Allows communication between terminal and web. *
14.	LANGUAGE SETUP *	Allows display and printer to switch languages. *
15.	EXTERNAL CARD READER *	Initializes External Card Reader *
16.	ISP CONNECTION	Enables/disables ISP Connection for EDC type, Auth and Batch.

### 4. HOST PARAMS

1.	HOSTS PARAMS	Edit parameter settings for all hosts.
2.	HOST PHONES	Edits authorization and batch phone numbers for all hosts.
3.	PRINT EDC SETUP	Prints EDC report listing; EDC types available, All EDC hosts, Capture types, Host parameters, Radio information (when applicable), AutoDial settings.
4.	PROTOCOL VERSION	Displays host protocol name and version.
5.	AUTODIAL SETUP	Sets the terminal to automatically dial out for manual batching.
6.	HOST RADIO ADDRESS	Displays programmed host radio address. (Wireless Mobitex and Motient terminals only)

**5. SYSTEM OPTIONS**

1.	SET TIME / DATE	Sets terminal's date (mm/dd/yy) and time (hh:mm:00): Clock is 24 Hour/Military time.
2.	EDIT PIN KEY	Edit host processor working key for debit processing.
3.	SELECT MASTER KEY	Change Master Key location.
4.	SET BATCH NO.	Change the current batch number.
5.	EDIT DATABASE	Void transaction: Clear database for selected or all EDC Types.
6.	WORKING MODE	Offers the ability to set: Tip options for retail and restaurant; Tab options for restaurant; Fraud Control options and to enter Comment Line.
7.	TEST MODE	Programming purposes only.
8.	PREDIAL CALL	Sets the Predial function ON, OFF or ON for Swipe transactions only.
9.	PIN PAD INITIALIZE	Initialize external PIN Pad when necessary.
10.	PIN PAD FUNCTION	Activates Secure PIN Pad and sets terminal up for PIN Pad encryption.
11.	PIN PAD CONFIG.	Toggles between internal or external PIN Pad.
12.	SELECT MAC KEY LOCATION	Set the MAC Encryption Key Location
13.	STATUS BAR	Enables/Disables status bar display; battery charge (terminals with back-up battery) and signal strength (for wireless terminals).

**6. RADIO TEST (Wireless Terminals Only)**

1.	RADIO TESTS	Mobitex & Motient Units: Signal strength; MAN or ILL number; Radio Information CDPD Units: CDPD tests; Diagnostic menu
2.	PRINT PARAMS	Mobitex or Motient Units: Prints radio type; MAN/LLI number; Radio addresses. CDPD Units: Prints radio type; Self IP address: Destination IP addresses.
3.	BATTERY TEST	Tests the back-up battery.

**7. DOWNLOAD**

1.	PARAMETERS	Downloads host and merchant parameters only.
2.	AUTOLOAD	Downloads full application and parameters.
3.	APPLICATION ONLY	Downloads application only, no host or merchant parameters.
4.	COMM. PARAMS	Sets communication parameters for downloading.

**8. COMMUNICATIONS**

1.	MINIMUM RETRIES	Number of times the terminal will call host processor before timeout.
2.	DIAL : TONE	Sets pulse or tone (DTMF) dialing.
3.	EXCHANGE PREFIX	Enables/disables and stores digit for dialing an exchange prefix before phone number.
4.	GATEWAY	Programming purposes only
5.	SUFFIX	Enables/disables and stores digit for dialing a suffix after phone number.
6.	VIA: LINE / RADIO	Toggles between Radio/Land Line and Land Line Only. (Wireless Only)
7.	CHECK LINE: ON	Enables/disables the check line function.
8.	DIAL TONE CHECK: ON	Enables/disables the dial-tone check function.